

6Y-P

MSD INSTALLATION INSTRUCTIONS

HEI Dust Cover Conversion for a Blaster 2 Coil PN 8401

WARNING: During installation, disconnect the battery cables. When disconnecting the battery, always remove the Negative cable first and install it last.

Parts Included:
1 - MSD HEI Dust Cover
1 - Y-spliced Pink Wire
1 - Brown Wire

The PN 8401 Dust Cover allows the use of an external Blaster 2 coil with an internal coil GM HEI distributor.

INSTALLATION

1. Disconnect the 3-pin wiring harness and the single Pink wire connector from the distributor cap.
2. Remove the dust cover from the original coil and remove the internal coil.

Note: Leave the rotor bushing in place.

3. Install the MSD Dust Cover using the original screws.
4. Connect the supplied Brown wire to the Brown wire of 3-pin distributor connector. Connect the other end of the Brown wire to the coil negative (-) terminal.
5. Connect the supplied Y-Spliced Pink wire to the single Pink wire (switched 12 volts) and the Pink wire of the 3-pin distributor connector. Connect the other end to the coil positive (+) terminal.

Note: The middle terminal of the 3-pin connector (Black wire) is not used.

6. Install the coil wire to the Cover.

Note: If you plan to install a tachometer, the trigger wire connects to the coil negative terminal.

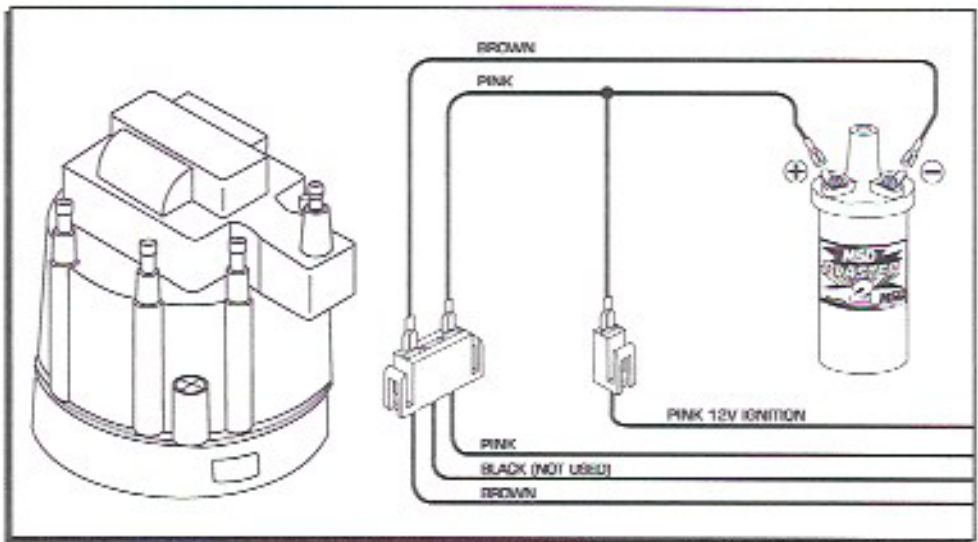


Figure 1 Wiring Diagram.